

### ATTENZIONE - ATTENTION - ACHTUNG

- Per lo smontaggio degli utensili utilizzare sempre la chiave di contrasto come indicato nel manuale d'uso.
- For disassembly of the tools use always the contrast key as mentioned in the user instructions.
- Fuer das Abmontieren der Werkzeuge immer den Gegenschlüssel benutzen wie in der Bedienungsanleitung erwaeht.

Cod. MT	Mandrino Spindle Spindel	I	RPM	Coppia Max Max Torque Max Drehmoment	Reversibile lato mandrino/contromandrino Reversible sub/main spindle side Umkehrbare Spindel-seite/ Gegenspindel-seite	Lubr.esterna Ext. coolant Aussenkuehlung	A	B	H Max Lato contromand. Subspindle side Gegenspindel-seite	CHIAVI NON INCLUSE Keys not included Schlüssel nicht einbegriffen	
										C HUB36	C HUB19_SP3
MNL0450116	ERA16+ERA16	1:2	12000	50Nm	X	X	97.63	94.13	77.6	C HUB36	C HUB19_SP3
MNL0450120	ERA20+ERA20	1:2	12000	50Nm	X	X	95.73	93.73	78	C HUB36	C HUB22

DMG-MORI

 
NL1500/2000/2500/3000 12 ST. - NLX1500/2000/2500/3000 12 ST. - NLX4000 - NZL2000/2500 - NZX2500 (BMT60)  
NT4200/4250/4300/5400 - CTX2500 (BMT60)

MODULO MOTORIZZATO ASSIALE BISPORGENTE MOLTIPLICATO I=1:2 H=90mm

Axial geared-up I=1:2 opposite face twin driven tool H=90mm

Axial angetriebenes Werkzeug halb vorspringend uebersetzt I=1:2 H=90mm

Subject to change without notice.



**M.T. srl**

Via Casino Albini 480  
Tel. 0541/956034-957884  
Fax 0541/956341  
47842 S. GIOVANNI IN M. (RN)  
e-mail: mtma@mtmarchetti.com  
http://www.mtmarchetti.com



MNL250-1-10