
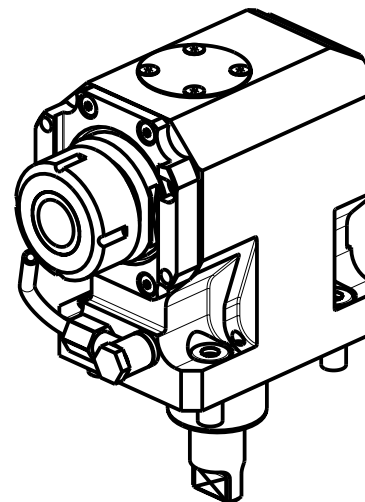
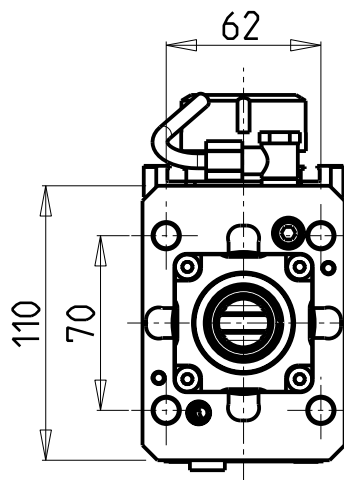


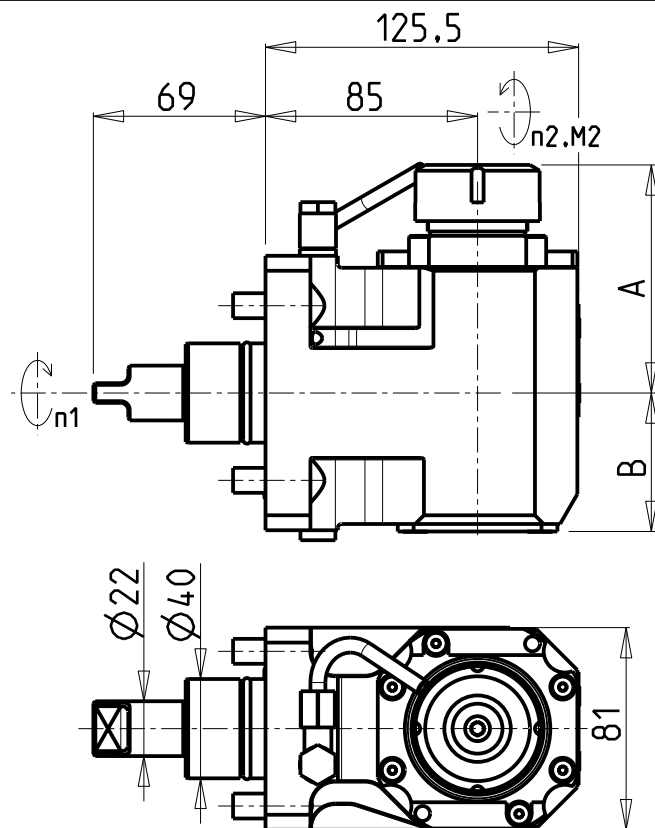

ATTENZIONE - ATTENTION - ACHTUNG

- Per lo smontaggio degli utensili utilizzare sempre la chiave di contrasto come indicato nel manuale d'uso.
- For disassembly of the tools use always the contrast key as mentioned in the user instructions.
- Fuer das Abmontieren der Werkzeuge immer den Gegenschlüssel benutzen wie in der Bedienungsanleitung erwaeht.

• Chiave inclusa

• Key included

• Schlüssel inbegriffen

Cod. MT	Mandrino Spindle Spindel	I (n1:n2)	RPM max n2	Coppia Max Max Torque Max Drehmoment M2 [Nm]	Reversibile lato mandrino/contromandrino Reversible sub/main spindle side Umkehrbare Spindel-seite/ Gegenspindel-seite	Lubrificazione int. Coolant through Innenkuehlung Pmax [bar]	Lubr.esterna Ext. coolant Aussenkuehlung	A	B	CHIAVI NON INCLUSE Keys not included Schlüssel nicht einbegriffen	
TKW 1010125	ER25	1:1	6000	40	X	-	X	88.4	55.5	CHSTER25	MNZ0410005 •
TKW 1010225	ER25	1:1	6000	40	X	70	X	88.4	68	CHSTER25	MNZ0410005 •
TKW 1010132	ER32	1:1	6000	40	X	-	X	91.4	55.5	CHSTER32	MNZ0410005 •
TKW 1010232	ER32	1:1	6000	40	X	70	X	91.4	68	CHSTER32	MNZ0410005 •

TAKISAWA
MOD: TM2000/3000 12ST. (2 KEYS TURRET)

MODULO MOTORIZZATO ASSIALE H=85mm
Axial driven tool H=85mm
Axial angetriebenes Werkzeug H=85mm

Subject to change without notice.

M.T. srl

Via Casino Albini 480
Tel. 0541/956034-957884
Fax 0541/956341
47842 S. GIOVANNI IN M. (RN)
e-mail: mtma@mtmarchetti.com
http://www.mtmarchetti.com



TKW 150-9-10